


ATV BODY ARMOUR

HOW TO INSTALL THE ARMOUR (FRONT BUMPER KIT)



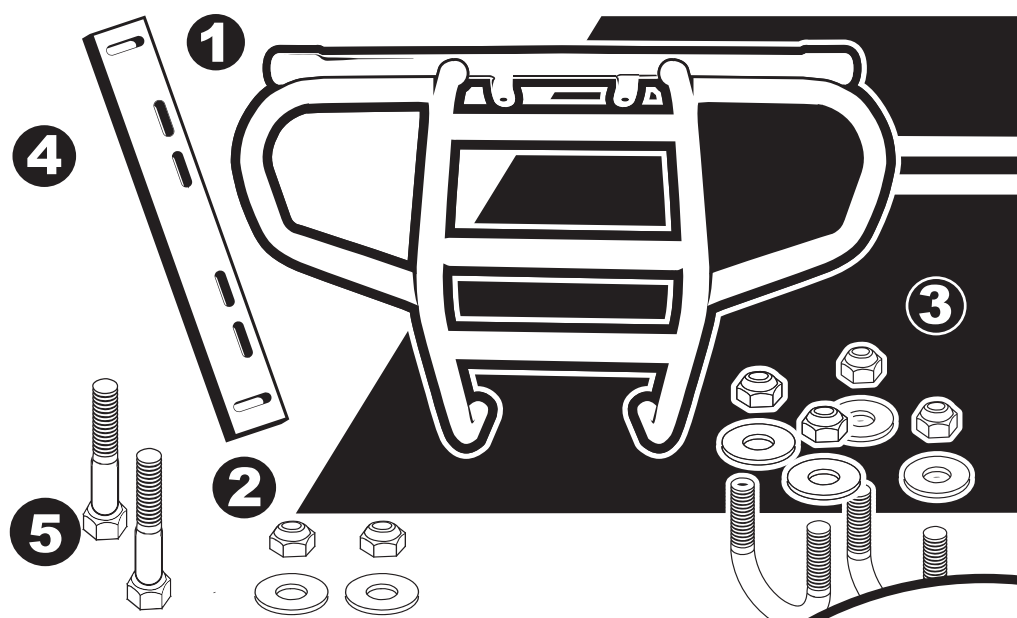


PARTS LIST:

- 1 front bumper
- 2 nylock flange nuts
- 2 5/16" U bolts
- 1 mounting plate
- 1 1/2" flange bolts

TOOLS REQUIRED

- 3/8" ratchet
- 1/2" socket (mount plate nuts)
- 9/16" socket (top clamps & bottom mounts)
- 9/16" wrench (holding nuts on top clamps)

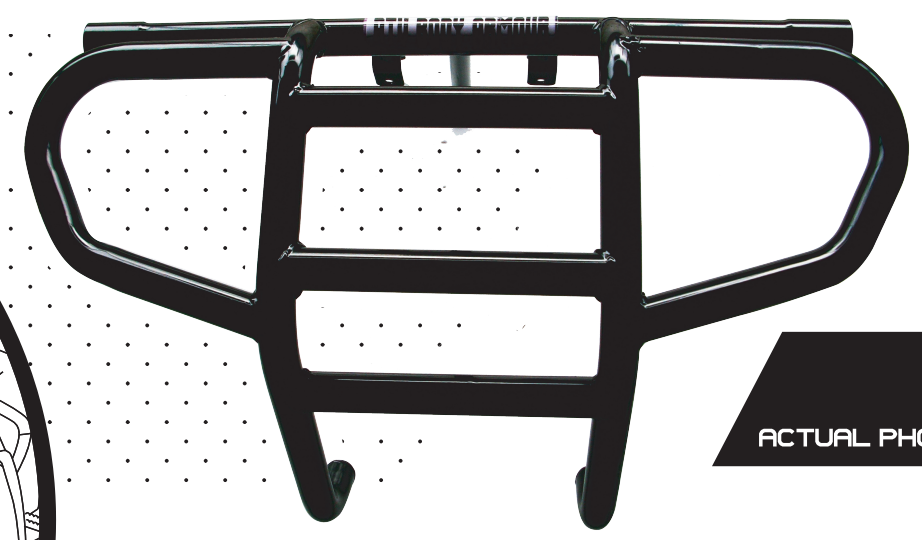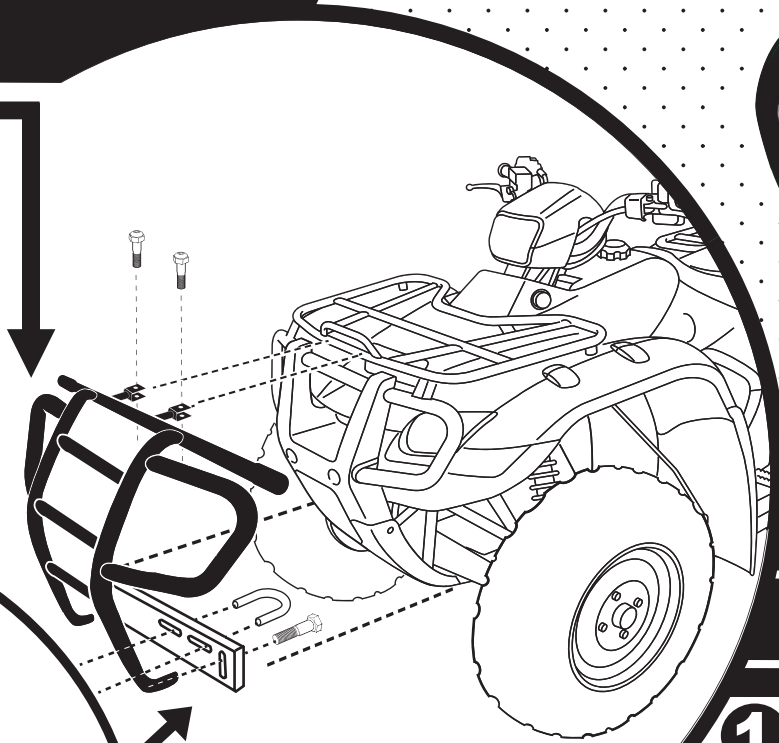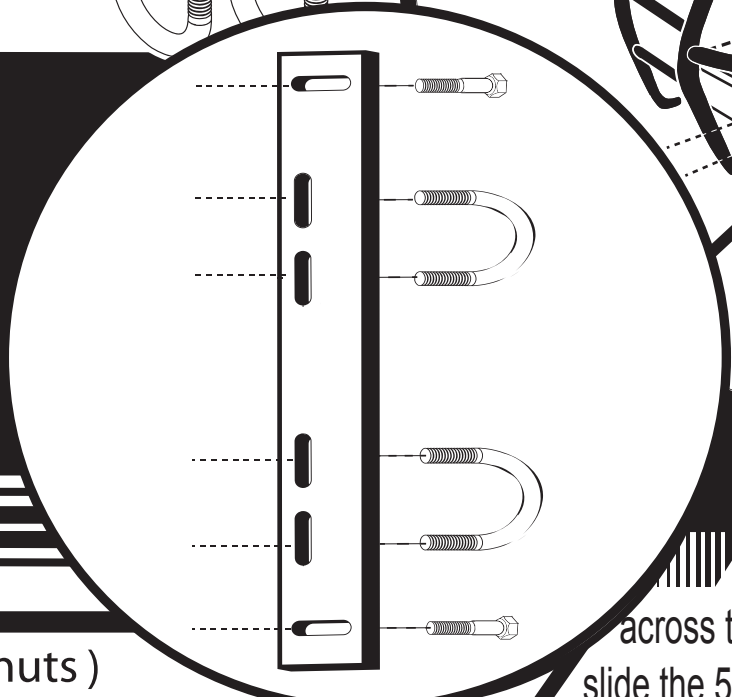

ACTUAL PHOTO

INSTALLATION GUIDE

1 Place the front bumper on the front rack by sliding the u clamps over the rack tube in between the "hoop" (on the front of the rack).
Install the 1 1/2" flange bolts and flange lock nuts through the u clamps.

2 Place the mount plate across the vertical frame tubes (located behind the skid plate) slide the 5/16" u bolts around the frame tubes and through the center slots on the mount plate add the washers and nuts for the u bolts. Use 1 1/2" flange bolts for the outside slots on the mount plate, screw these into the bottom bumper tubes.

