

ATV BODY ARMOUR

HOW TO INSTALL THE ARMOUR

(SIDE PROTECTION KIT)

PARTS LIST:



- 2 side tubes
- 4 clamps
(tube to rack)
- 4 2" flange bolts
- 4 1 1/2" flange bolts
- 8 nylock flange nuts

FOOT PEG MOUNT


- 2 2 1/2" clamps
(or 4" clamps
depending on model)
- 2 2" bolts
- 2 4" bolts
- 2 1" flat washers
- 2 11" pipe
- 2 1 3/4" bushings

TOOLS REQUIRED

- 3/8" ratchet
- 9/16" socket (top clamps & bottom
mount plate bolts)
- 9/16" wrench (top clamps)

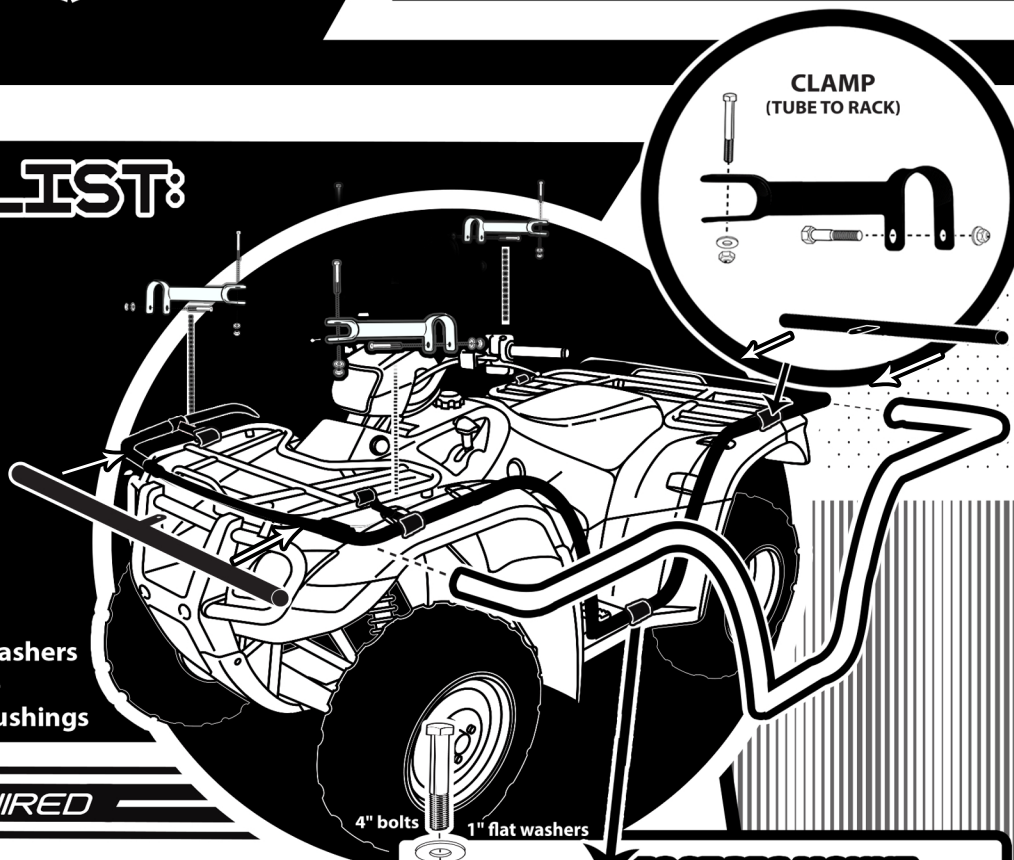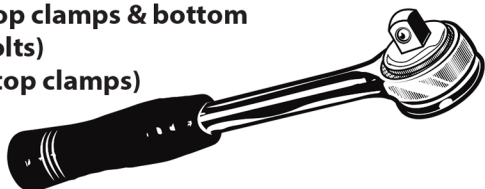

FOOT PEG MOUNT

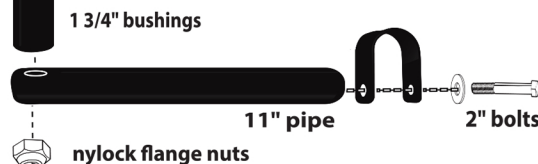

FOLLOW THESE EASY STEPS

1. Place the front bumper (tube only) on the front rack (u clamps go over the rack tube and in between the rack hoop) use the 1 1/2" flange bolts for the u clamps.

2. Slide one side tube in the front bumper tube.

3. Side tube clamps: Slide the 2 mounting clamps (mounted on the side tubes) in between the front and rear rack tubes. Use the 1 1/2" bolts and flange nuts for the u clamps.

4. Foot peg mount:

Place the 1" flat washer on the 4" bolt, slide the bolt through the foot peg. On the bottom side of the foot peg place the 1 3/4" tube bushing then the 11" pipe through the 4" bolt, add a nut to fasten.

Slide the 2 1/2" clamp over the tube (or 4" clamp depending on model). Use a 2" flange bolt for the bottom of the clamp, screw this into the 11" pipe.

(see photos) (the foot peg goes between the washer and the bushing where my finger is pointing) can you add an illustration of the foot peg mount?

5. Slide the last side tube in the front and rear bumper and repeat step 3.

Tighten all nuts and bolts so the clamps do not move after pulling up and down on the side tube frames.

You can also bolt the side tubes to the front and rear bumpers. Make sure the side tubes are pushed in the front and rear bumpers 2", then drill the hole approx 1" from the end of the side tube, install the bolt and nut.